



NOTES:
 SEE PAGE 2 FOR CORNELL WIRE TERMINATIONS ON PI-9064M/S.
 SEE VERSAPAGE INSTALLATION MANUAL FOR USER PROGRAMMING AND REPORTING DETAILS.