


A1211/A1511

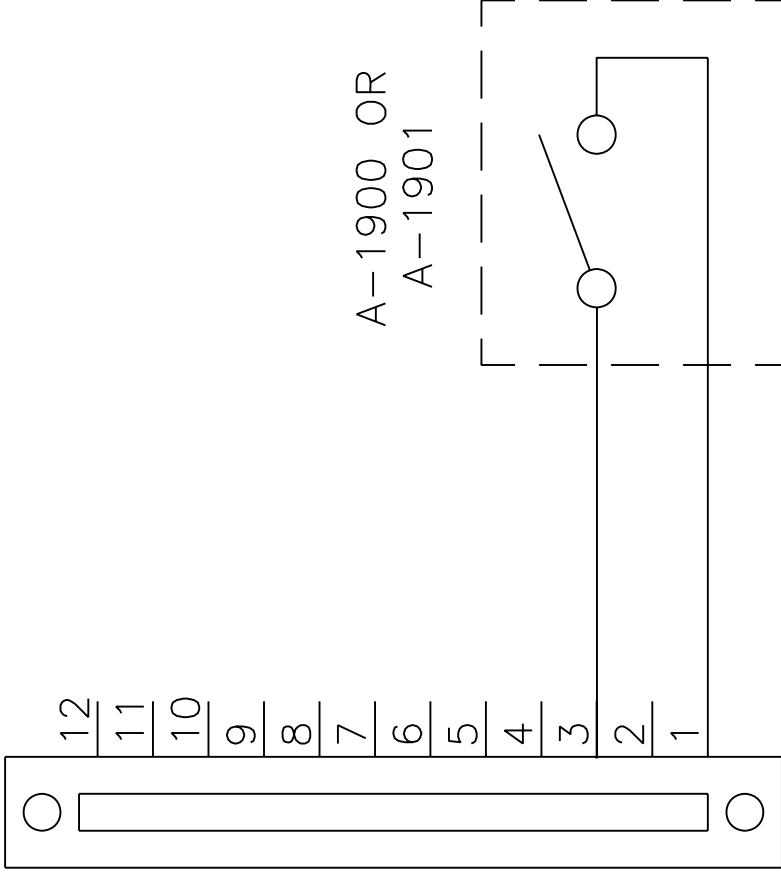

- RMT GREEN LED (-)
- DOOR STATUS (A1511 ONLY)
- RMT RED LED (-)
- AUX ALARM OUT (-)
- RMT DISARM
- RMT ARM
- +12VDC
- N.O. CONTACT
- N.C. CONTACT
- ZONE ENABLE
- NEG
- NEG

A-1900 AND A-1901

THE A-1900 AND A-1901 ARE KEY SWITCHES USED TO ENABLE/DISABLE ZONE SWITCHES ON THE MASTER PANEL. THE A-1900 IS MOUNTED ON A SINGLE-GANG STAINLESS STEEL PLATE. THE A-1901 IS MOUNTED ON THE MASTER PANEL. when a ZONE SWITCH IS DISABLED, STATUS CHANGES CAN NOT BE MADE USING THE ZONE SWITCH.

EACH ZONE CARD IS SHIPPED WITH A FACTORY INSTALLED JUMPER BETWEEN TERMINALS 1 AND 3. IT IS NECESSARY TO CUT THIS JUMPER FOR ALL ZONES TO BE CONNECTED TO THE A-1900 OR A-1901.



CORNELL Communications, Inc.
sales@cornell.com 414-351-4660
 Web: www.cornell.com 414-351-4657(fax)

DATE: SEPTEMBER 28, 2006

TITLE: A-1900, 1901 WIRING

SYSTEM: 1000 DOOR MONITOR

DRAWING # 90019-06

DA1900WM