

VersaPage/Aura  
PP-9000AS/PP-9000W2/ PP-9000W5 Pager Programming



To program the pager:

1. Remove the battery from the pager.
2. Insert the battery while holding down button (1) until "Password" shows on the display.
3. If you choose to change the password, use button (1) to increase the digit and button (2) to move to the next number to the right. When finished with the password, press button (3) to advance to the "Frequency" setting.
4. Use the same buttons to select the proper frequency. The frequency setting is listed on the back of the transmitter. Press button (3) to move to the next screen "Capcode".
5. Using the same buttons, set up the "Capcodes" or pager addresses. Each pager has (6) available address slots. Press button (3) to advance to each capcode. When finished with capcodes, press button (3) to move to the next screen "Baud Rate".
6. Using button (1) set the baud rate to 512. Press button (3) to advance through the remaining screens until the pager beeps and shows "Pass" on the screen.
7. Remove the battery. After a few seconds, re-insert the battery. Pager programming is complete.