




Emergency Response Systems

P-512241A - 12 or 24 Volt, 1 AMP Power Supply

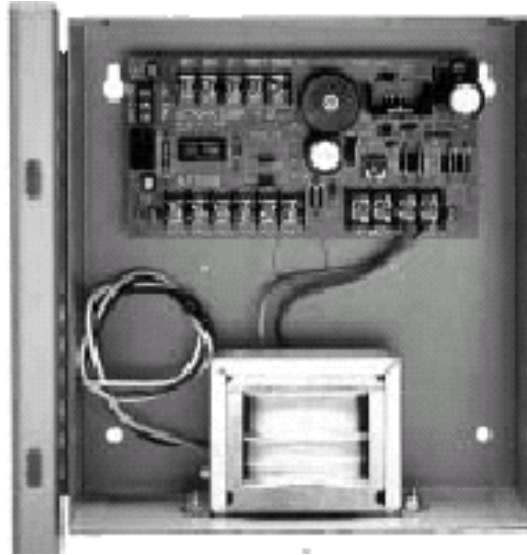

P-512241A

The Cornell P-512241A is UL listed for fire alarm, burglar alarm, access control applications.

Rated Output: 1 amp continuous supply current at 12 VDC and 1 amp continuous supply current at 24 VDC.

Power: 115VAC/60Hz, .6 amp. 1 amp continuous supply current at 12VDC (switch open), 1 amp continuous supply current at 24 VDC (switch closed).

Circuit Protection: Short circuit and thermal overload protection.

Termination: Screw terminals.

Exterior: Grey, baked enamel finish.

Dimensions:
8.5" H x 7.5" W x 3.5" D

Indicator LED Diagnostics:

Red-DC	Green-AC	Status
On	On	Normal Operating condition
Off	On	No DC output
Off	Off	Loss of AC No DC output

Mounting: Slotted keyholes make it suitable for vertical wall or rack mounting.

ENGINEERING SPECIFICATIONS

The contractor shall furnish and install a CORNELL P-512241A Power Supply for use with the CORNELL Series.

1-800-558-8957

CORNELL COMMUNICATIONS, INC.

Milwaukee, Wisconsin USA - 800-558-8957 - 414-351-4660 - Fax 414-351-4657
www.cornell.com - sales@cornell.com

