



# Push Button Stations, Satellite

## HWN7602UA, HWN7603UA, HWN7604UA

### Emergency, Staff Locator and Code Blue Stations

The Pushbutton Emergency, Staff Locator and Code Blue functions are provided by three auxiliary call devices which are used in conjunction *with an addressable Patient Station*. Each auxiliary device is a single gang, wall-mounted unit, installed with a brushed stainless steel faceplate (model HFN7601UA). To place a call, the membrane pushbutton switch is pressed, which lights the station LED indicator and activates other programmed output devices, such as a Dome Light, Duty Station or Annunciator Panel. The call is canceled by pressing the RESET switch on the station.

### Features

- Distinct Call Annunciation - Flexible system configuration provides distinct annunciation throughout the system to alert the staff to high priority calls. A call placed from any auxiliary station must be canceled at the point of origin, assuring a visit by the nurse.
- Membrane style CALL and RESET switches
- Quick-disconnect insulation-displacement terminals
- Designed for simple installation and maintenance


### Model Identification

- HWN7602UA Pushbutton Emergency Station, single gang, with membrane PRESS FOR HELP and RESET switches and LED call indicator
- HWN7603UA Staff Locator Station, single gang, with membrane STAFF IN and STAFF OUT switches and LED call indicator
- HWN7604UA Code Blue Emergency Station, single gang, with membrane CODE BLUE and RESET switches and LED call indicator



### Technical Data

Input Power: 12 VDC, 0 mA standby current  
12 mA when LED is on

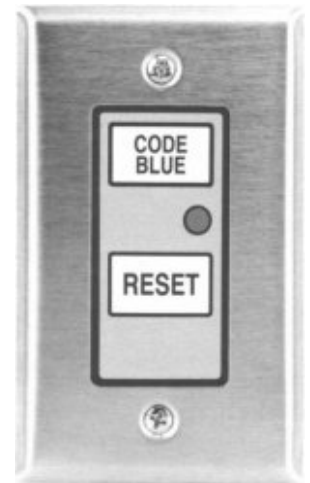



## Architect's Specifications

The Pushbutton Emergency Station (model HWN7602UA), Staff Locator Station (model HWN7603UA) or Code Blue Station (model HWN7604UA) shall be a single-gang, wall-mounted call device, to be installed with a model HFN7601UA, single-gang, brushed stainless steel faceplate. These stations shall be used in conjunction with a visual or voice Patient Station.

The front panel of each station shall include the following:

Pushbutton Emergency (HWN7602UA)

A membrane PRESS FOR HELP switch

A red CALL LED indicator

A membrane RESET switch

Staff Locator (HWN7603UA)

A membrane STAFF IN switch

A red STAFF IN LED indicator

A membrane STAFF OUT switch

Code Blue (HWN7604UA)

A membrane CODE BLUE switch

A red CALL LED indicator

A membrane RESET switch

A 5-position quick-disconnect, insulation-displacement type connector shall be provided to terminate field-installed power and control lines.

## WALL BOX

Each type of auxiliary call device requires a standard one-gang electrical back box, 2 1/2" deep minimum, or equivalent.

