


SENTINEL V2 AOR SYSTEM FIELD DEVICES

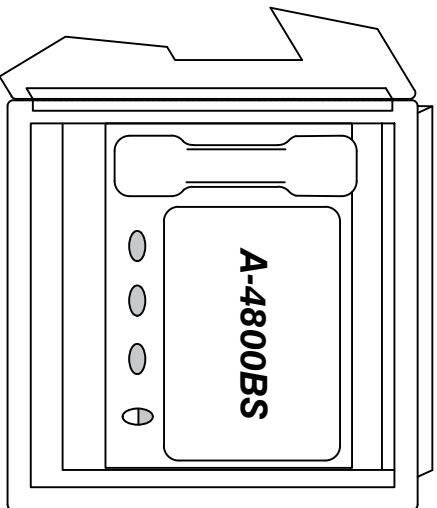


THE **A-4800BS** MAIN BASE PHONE(S) CAN MOUNT ON A DESK OR IN THE **BB-48SM** METAL BACKBOX.

OPTIONAL SEMI-FLUSH TRIM RING, THE **BB-48TS**, IS NOT INCLUDED:

BB-48SM = METAL BACKBOX WITH VIEW WINDOW DIMENSIONS:

METAL BACKBOX: 14.5"W X 12.5"H X 5.0"D
VIEW WINDOW: 8.25"W X 6.5"H

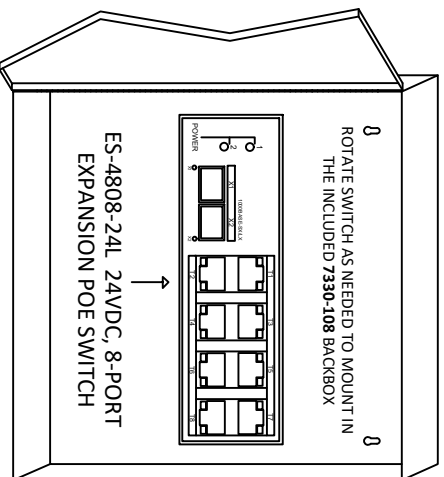


EACH ES-4808S EXPANSION KIT INCLUDES:

1. **ES-4808-24L** = 24VDC 8-PORT POE SWITCH W/ (2) SFP
2. **7330-106R** = BACKBOX (12.00" X 12.00"H X 4.0"D)
3. **B-5243B** = 24VDC POWER SUPPLY TO POWER **ES-4808-24L**

MOUNT THE **ES-4808-24L** INSIDE OF THE **7330-108** ENCLOSURE.

- **ES-4808-24L** SUPPORTS A COMBINATION OF UP TO (8) **4800VS-3** CALL STATIONS OR **A-4800BS** PHONE DEVICES.
- **ES-4808-24L** REQUIRES 24VDC INPUT POWER (18/2 WIRE).
- **JUMPER (V1+) TO (V2+) AND (V1-) TO (V2-)**. THIS MUST BE DONE FOR ALL **ES-4808-24L** SYSTEM DEVICES BEING USED.
- CAT5E OR BETTER FOR ALL NETWORK CONNECTIONS.

THE **7330-106R** ENCLOSURE CAN MOUNT IN A MAINTENANCE, NETWORK OR ELECTRICAL ROOM / CLOSET AREA.

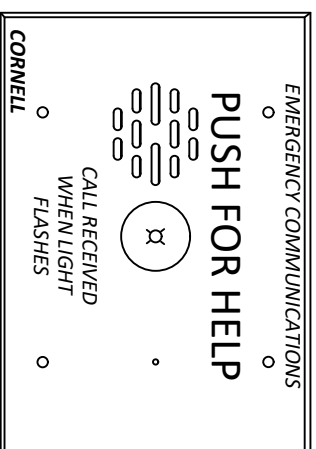


THE **4800VS-3** CALL STATION DEVICES HAVE A RED MUSHROOM PUSHBUTTON TO ACTIVATE A CALL.

DIMENSIONS: 6.50"W X 4.50"H X 2.00"D.

- MOUNTS IN A STANDARD 3-GANG ELECTRICAL BOX
- MINIMUM OF 2.5" DEEP
 - ASSEMBLED WEIGHT: (.65) LBS.

SINGLE CAT5E CABLE TO ETHERNET PORT ON **4800VS** CALL STATION FROM ANY **ES-4808-24L** (8-PORT POE SWITCH).

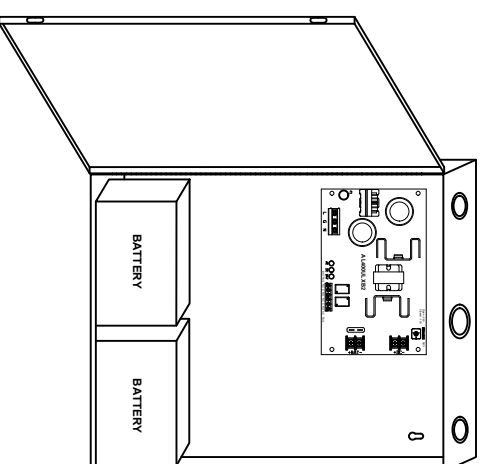

THE **B-5243A** IS A 24VDC, 3A (UL LISTED) POWER SUPPLY MOUNTED IN A SURFACE MOUNT, LOCKING METAL ENCLOSURE.

(1) **B-5243B** IS INCLUDED WITH EACH **ES-4808S** KIT.

B-5243B ENCLOSURE DIMENSIONS: 12"W X 16"H X 5.0"D.

MOUNTS ADJACENT TO **7330-108** BACKBOX.

120VAC INPUT POWER REQUIRED FOR EACH **B-5243B**.

AC LOSS AND BATTERY LOW/FAIL OUTPUT CONTACTS.

INCLUDES THE **B-4807** BATTERY PACK W/ FUSE KIT (PAIR OF 12VDC, 7AH BATTERIES AND FUSED LEADS).