

## Annunciator Station Three & Six Zones



A-4006A

**Description:** A-4003A and A-4006A Annunciator Stations provide call indication. Provided are a stainless steel plate with permanent silk screen numbered designations, red LED indicator lights and a power indicator light (green LED).

**Operation:** Annunciator Station indicates incoming calls for use in systems requiring only three to six indicators. Call indication provided by red LED indicators and electronic tone. Panel equipped with High-Low tone switch.

Options: Latching circuit available only on six station, Model A-4006L.

**Mounting:** Flush two-gang (A-4003A) or three-gang (A-4006A) plaster ring or equal. Surface mounting is Wiremold 5744-S two- or three-gang as required. The minimum depth required is 2".

**Engineering Specifications:** Provide and install a Cornell A-4003A (A-4006A) Annunciator. Faceplate shall be satin finish stainless steel with silk-screened designations. Call indicator shall be red LEDs and electronic tone. High/Low tone switch shall be provided. When a call comes in the light will turn on and a tone will be heard. Unit shall be flush or surface mounted.

## **Technical Information:**


- Power Requirements: 24VDC
- Operating Environment: 50-120°F Indoor Non-condensing
- Physical Faceplate Dimensions: 4.5"H x 4.57"W (2 Gang) 4.5"H x 6.375"W (3 Gang)
- Mounting: 2 or 3-Gang back box with 2" minimum depth
- Wiring: #22 AWG Minimum




DA4003CM Rev 160516

## Available in 2-6 gang sizes:

\*stations are only UL Listed in the 2 gang size \*A-4006A only available on 3G and up

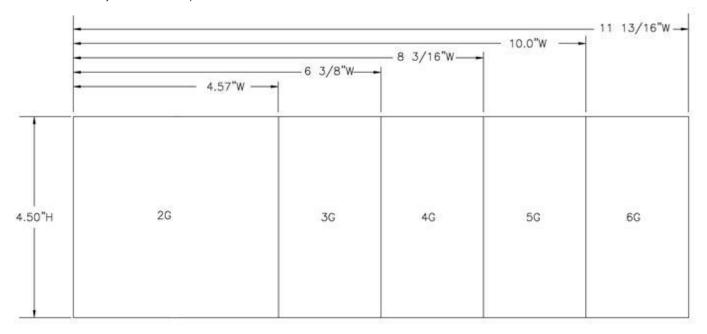

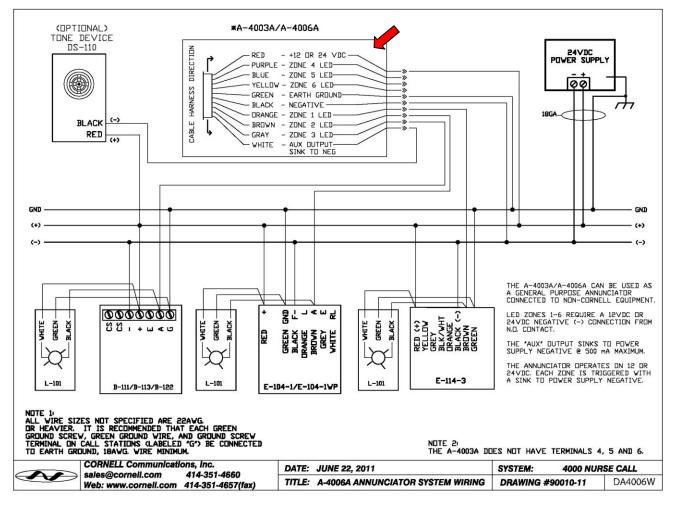

CORNELL COMMUNICATIONS, INC.

