



<u>TERMINAL</u>	<u>LEAD WIRE:</u>	<u>DESCRIPTION:</u>
G =	GND (GRN)	EARTH GROUND
A =	A (BRN)	"ANNUNCIATOR" NEG. OUT
E =	E (GRY)	EXTRA (EXTRA "A")
- =	F- (BLK)	NEGATIVE INPUT
L =	L (ORG)	LOOPING INPUT
RL =	RL (WHT)	RED LIGHT (ISOLATED FROM "A")
+ =	+ (RED)	24 VDC POSITIVE

WHEN REPLACING E-104 WITH E-104-1, USE THIS DRAWING TO MATCH THE OLD SCREW TERMINALS TO THE WIRE LEADS ON THE E-104-1

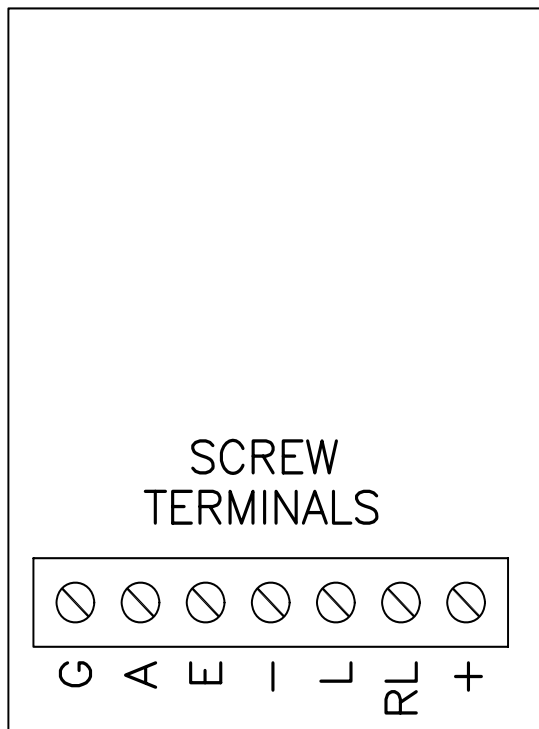

E-104 (OLD STYLE):

NOTE:
Individually cap
each non-used lead
with a wire nut.

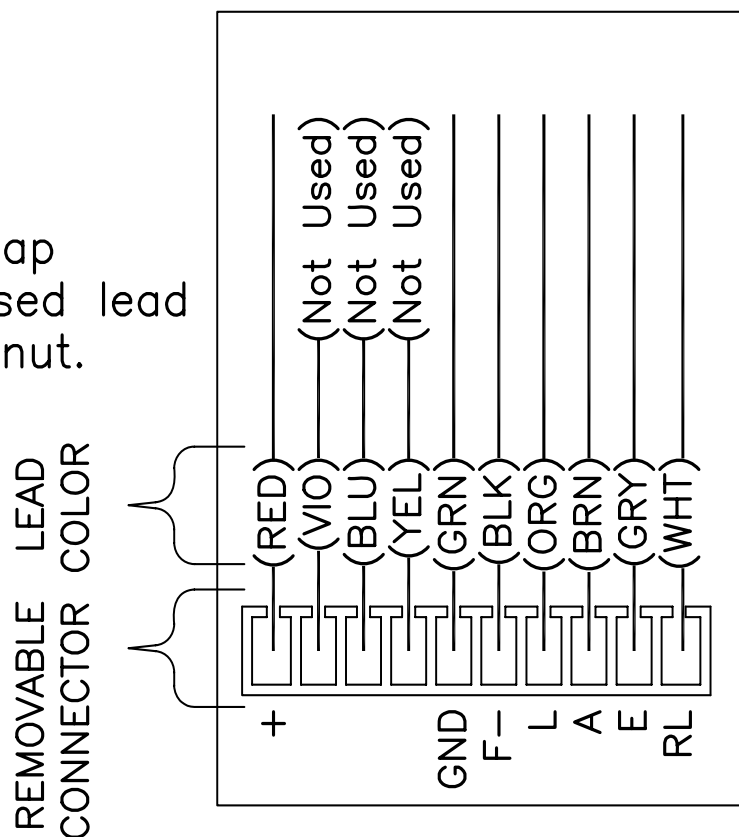

E-104-1 (NEW STYLE):

