


NORMALLY CLOSED  
DOOR CONTACT

12VDC  
RELAY

ANY RECTIFIER  
DIODE WILL WORK


DIODE KEY:




NOTES:  
ALL WIRE SHOWN MAY BE  
22 AWG OR HEAVIER.

IF EITHER KEYPAD IS  
DISARMED, THE DOOR MAY  
BE OPENED WITHOUT  
INITIATING AN ALARM.

EACH KEYPAD CONSUMES  
20 mA MAX.

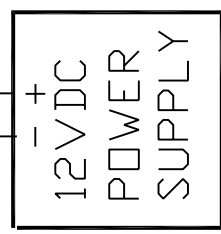

	<b>CORNELL Communications, Inc.</b> sales@cornell.com 414-351-4660 Web: www.cornell.com 414-351-4657(fax)		<b>DATE: SEPTEMBER 28, 2006</b>	<b>SYSTEM: DOOR MONITOR</b>
			<b>TITLE: A-1809C</b>	<b>DRAWING # 8037-06</b> <b>DA1809CW-B</b>